


ASSEMBLY INSTRUCTION FOR 32354

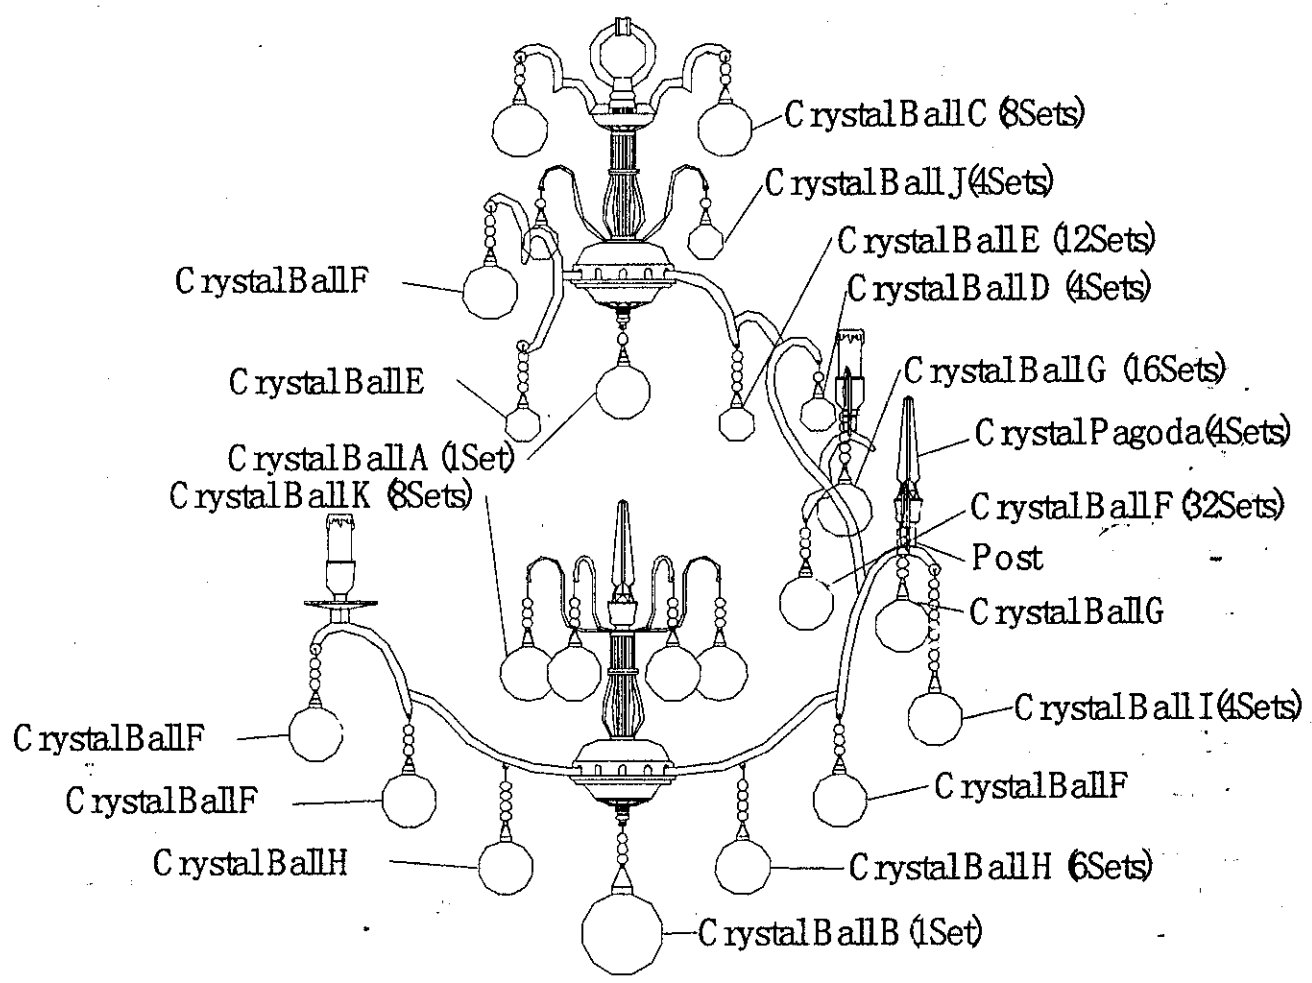


IMPORTANT SAFETY INSTRUCTION

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION!

Carefully unpack and identify parts before assembly (Bulbs are not included).

1. Screw the crystal pagoda into the post, and tighten it by hand;
2. Hanging all crystal balls as shown on the above drawing;
3. Install light bulbs (Not included), See relamping label for bulb type and maximum allowed wattage;
4. Follow enclosed "Mounting And Wiring Instructions" for electrical and fixture installation onto outlet box.

FIGURE 1

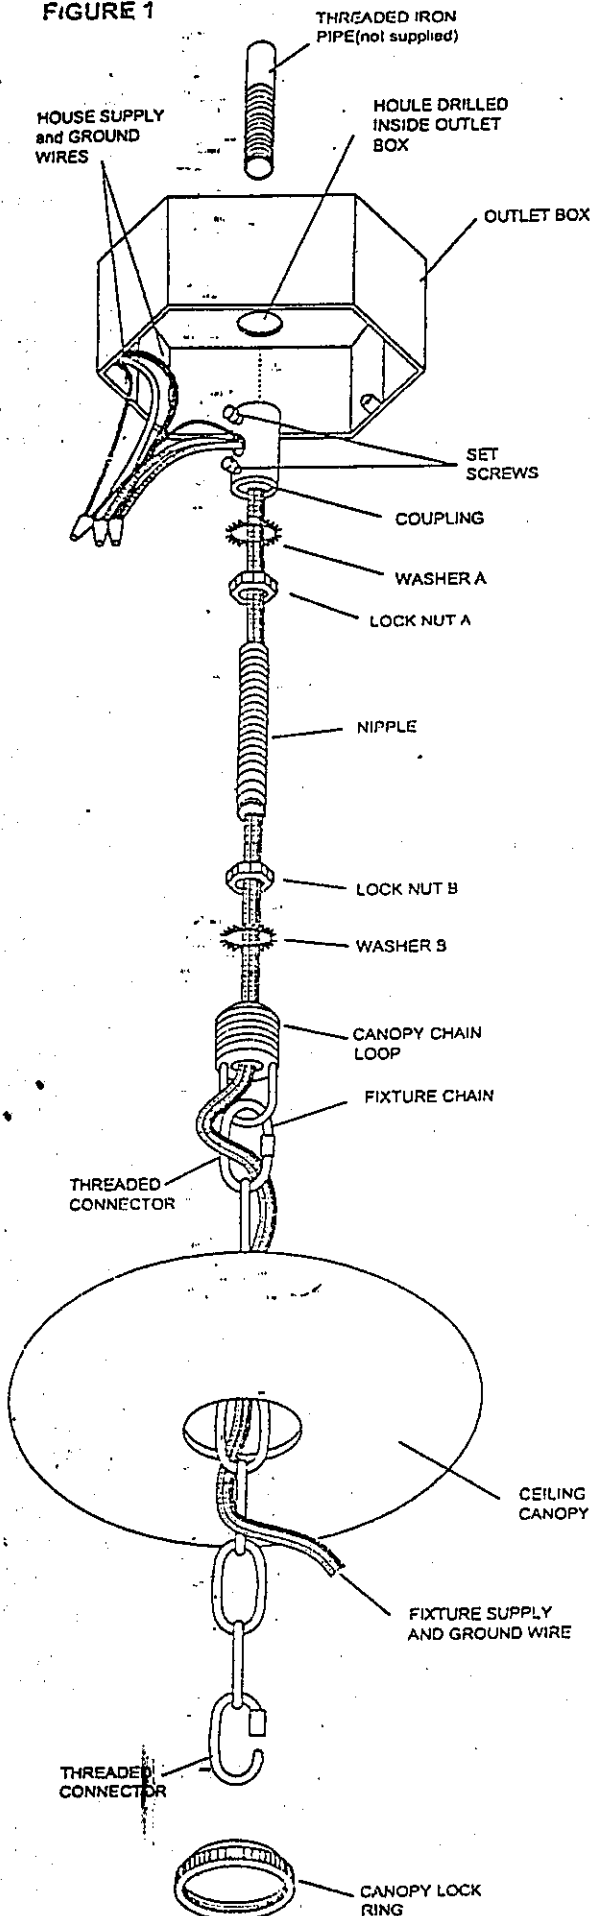

INSTALLATION INSTRUCTIONS:
FOR FIXTURE OVER 25 LBS (Canada only)
FOR FIXTURE OVER 50 LBS (U.S.A. only)

We recommend a licensed electrician or contractor be consulted for this installation.

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE 1. Be sure the power to the installation point is OFF.
2. This weight of this fixture (over 25 lbs. for Canadian installations) will require a means of support independent of the OUTLET BOX. This fixture must be supported by IRON PIPE with approx. 3/4" of 3/8-18 NPT at top and bottom. Note: IRON PIPE is NOT supplied and length will vary depending on application. The IRON PIPE should be positioned so that 3/4" protrudes into the OUTLET BOX. Note: the opposite end of the PIPE must be attached to a structural or bridging member of sufficient strength to support at least 4 times the fixture weight. A hole must be drilled on the inside top center of the OUTLET BOX. We recommend the consultation of a licensed electrician or contractor due to the complexity of this installation.
3. With the IRON PIPE properly situated, locate COUPLING and proceed to thread onto the end of the IRON PIPE protruding into the OUTLET BOX. Thread COUPLING onto pipe until tight. Tighten the top SET SCREW with pliers to secure COUPLING to IRON PIPE.
4. Making the connections: (We recommends (2) people for the rest of this installation) Proceed to unravel the FIXTURE SUPPLY and GROUND WIRES. Locate the FIXTURE CHAIN and attach one end to the FIXTURE LOOP at the top of FIXTURE. Determine desired hanging height of fixture and adjust chain length. Please note that depending on chain material thickness, you might be required to use chain pliers to spread chain links open. Proceed to pass the FIXTURE SUPPLY and GROUND WIRES through the chain, alternating links. Proceed to pass the wires through the following mounting components in this order: 1) CANOPY LOCK RING, 2) CEILING CANOPY, 3) CANOPY CHAIN LOOP, 4) SHAKE PROOF WASHER B and LOCK NUT B, 5) NIPPLE, 6) LOCK NUT A and SHAKE PROOF WASHER A. Position the fixture over the OUTLET BOX and pass the fixture wires through the bottom center of the COUPLING. Pull wires through the wire way hole on side of COUPLING. Proceed to thread the NIPPLE into the bottom center of the COUPLING until tight. Tighten the LOWER SET SCREW. Proceed to thread LOCK NUT A and SHAKE PROOF WASHER A up NIPPLE until seated against the bottom of the COUPLING. Tighten until snug with pliers. Proceed to attach the FIXTURE GROUND WIRE to HOUSE GROUND WIRE using wire connector (not supplied). Using wire connectors, connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); Connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap all connectors with approved electrical tape.
5. With the proper connections made, proceed to thread the CANOPY CHAIN LOOP onto the bottom of the NIPPLE. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Proceed to thread LOCK NUT B and SHAKE PROOF WASHER B down onto the top of the CANOPY CHAIN LOOP. Tighten and snug with pliers.
6. Proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
7. Restore power to installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**

MOUNTING AND WIRING INSTRUCTIONS

1. Fasten mounting strap to junction box with machine screws found in junction box. The mounting strap must be used to provide proper grounding of fixture.
2. Turn nipple into threaded hole in the mounting strap. Turn hex nut onto nipple. Remove knurled nut from hanger loop. Turn hanger loop onto nipple. Place canopy up against ceiling and adjust nipple to leave about 3/8" protruding through canopy. Remove canopy and tightly lock nipple in place by turning hex nut up against mounting strap.
3. Assemble one end of chain to fixture loop by opening chain link and closing it around loop. NOTE: Never twist chain link to open. Chain link must be opened in a "C" shape.
4. Weave the two conductor cord and bare ground wire through the chain about every third link. Slide knurled nut down chain. Slide canopy down chain.
5. Adjust chain length and wire lead length at this time for desired hanging height of fixture. Leave at least 12" of leads beyond end of chain.
6. Open last chain link then lift chain and fixture up to ceiling and hook open link through hanger loop. Close chain link.
7. Insert wire leads through hole in hanger loop and nipple

into junction box. Pull leads down out of junction box for easier wiring. Connect the IDENTIFIED lead (white, tinned or ribbed - if both conductors are the same color, feel for the ribbed edge that runs the entire length of one side) to the WHITE house wire. Connect the UNIDENTIFIED lead to the BLACK house wire. Turn the green ground screw into the hole in the mounting strap and wrap the bare ground wire around screw one full turn and tighten screw. Connect remaining end of bare wire to the house ground wire (bare). If the junction box itself is metal and is already grounded, attachment to the green screw only is sufficient. Always use wire connectors that are UL approved for the size and number of wires to be connected.

Caution: Never connect the bare ground wire to the black or white house wires.

8. Place all wires and connectors back into the junction box making sure there are no loose wire connectors or bare leads. Slide canopy up to ceiling and hold in place by turning knurled nut onto hanger loop.

9. (For fixtures with glass shades only) Your glass shade is held in place either by thumbscrews or by a spin-on ring screwed onto a threaded socket. Place glass shade(s) into holder and tighten thumbscrews or spin ring onto socket.

10. Lamp fixture with proper size bulbs in accordance with the wattage label found on the fixture.

