




ASSEMBLY INSTRUCTIONS FOR 33186

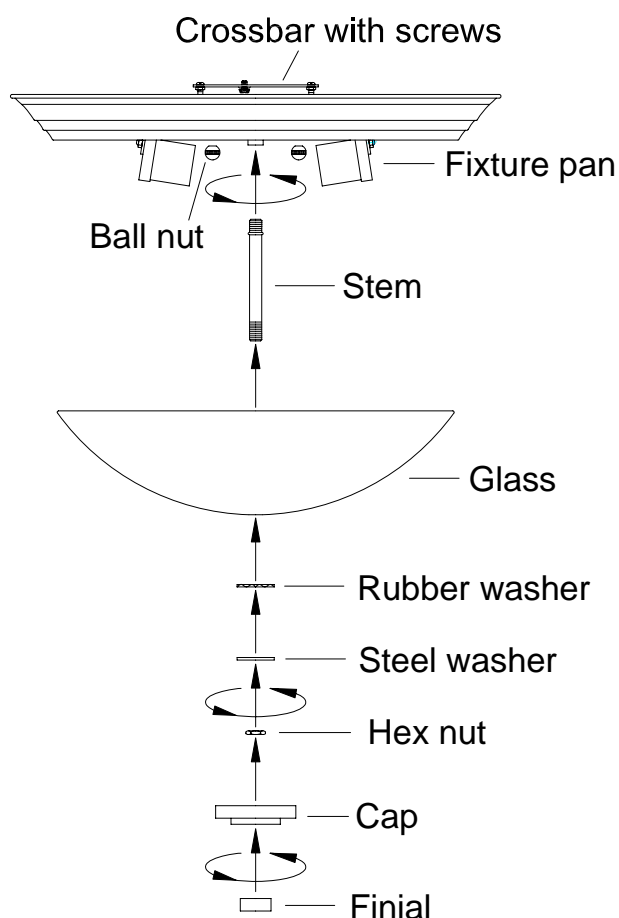

1. With power to the installation point **OFF**, attach the crossbar with (2) mounting screws to ceiling mounted outlet box with (2) outlet box screws.
2. Make wires connections: (We recommend 2 people for this step). Position the fixture pan under the outlet box. Attach house ground wire to fixture ground wire. Proceed to attach both to the crossbar using ground screw. Using wire connectors connect the house white wire to the fixture white wire (or ribbed side); connect the house black (or red) wire to the fixture black wire (or smooth side).
3. Carefully tuck all wires into the ceiling mounted outlet box and position the fixture over the outlet box. Align and pass the (2) mounting screws attached to crossbar through (2) mounting holes in fixture pan. Locate (2) ball nuts and thread it onto ends of mounting screws. Hands tighten until snug to secure fixture to ceiling. Be sure there are no trapped or pinched wires.
4. Install the top end of stem into the coupling at the bottom center of fixture pan. Hands tighten until snug.
5. Install proper bulbs (not provided) to each socket referring to the markings and/or labels for maximum wattage.
6. Locate steel washer, rubber washer and glass, pass their center holes through the bottom of stem and secure with hex nut as shown in the illustration.
7. Carefully pass the center hole of cap through the protruding stem and secure with finial. Hands tighten until snug.
8. Restore power to the installation point **ON**. Retain this sheet for future reference.