




31460/1

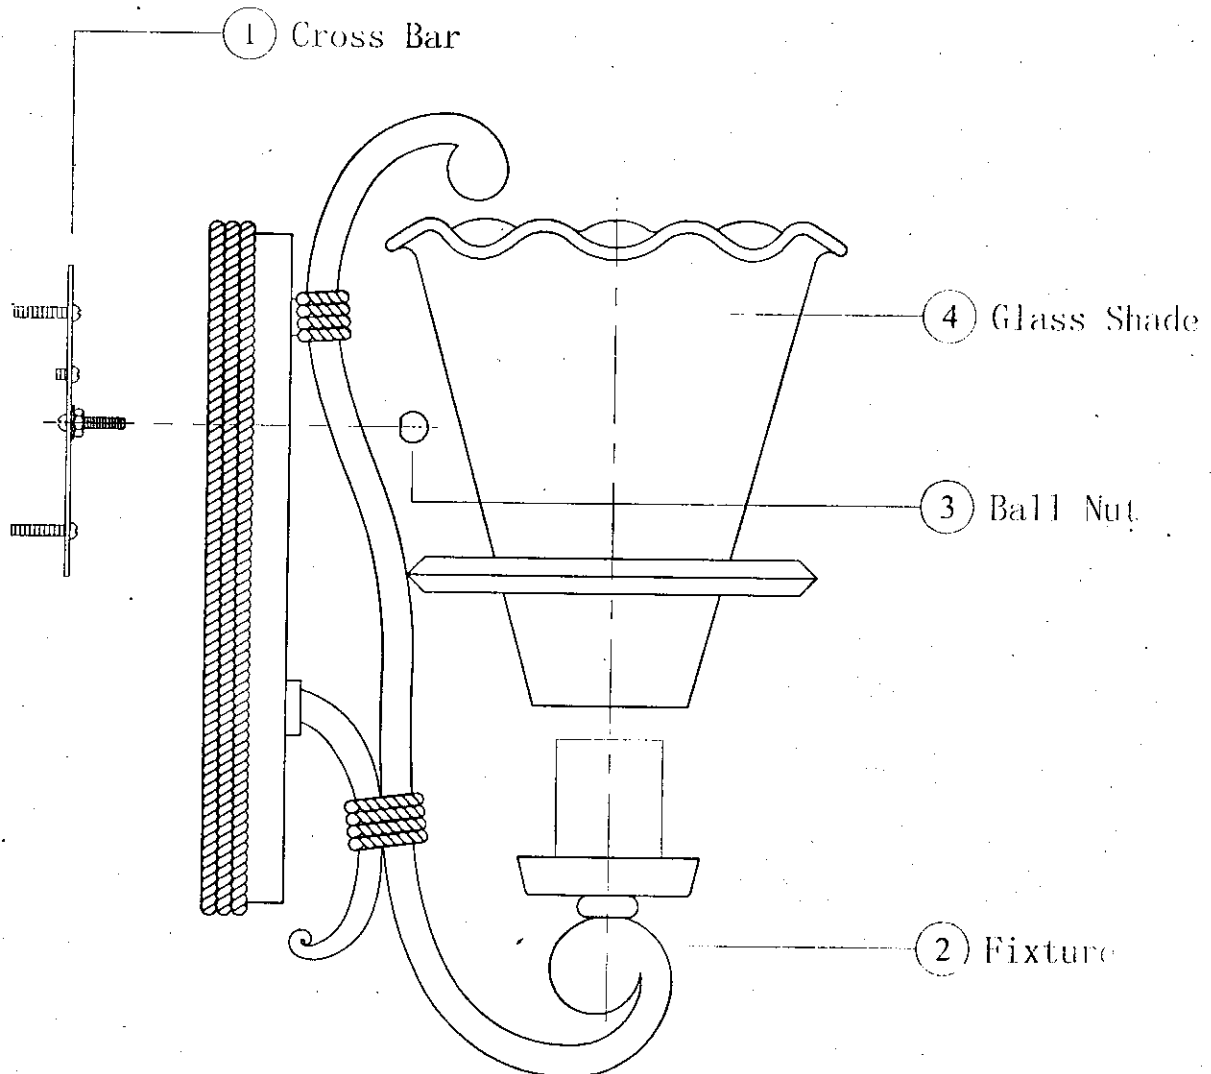

Assembly Instruction For 31460/1:

1. Attach the Cross Bar(1) to the wall outlet box.
2. Connect the supply & fixture wires at the wall outlet box.
3. Attach the Fixture(2) to the Cross Bar(1) using two Ball Nuts(3).
4. Attach the Glass Shades(4) to the Fixture(2).
5. Install the correct bulbs(not provided).