


Note:
Before assembly, separate part "B" from body "A" by unscrewing bail nut "H", and install body "A" to the outlet box (not furnished) in the wall, then complete the assembly referring to the diagram.

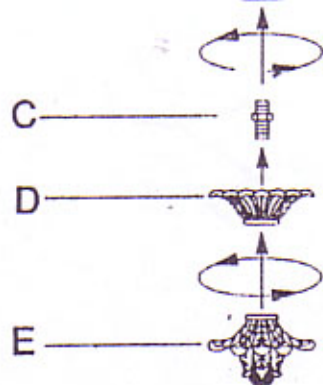

ASSEMBLY STEP:

1. C.D.E → B
2. H.B → A
3. E.F.G → A