
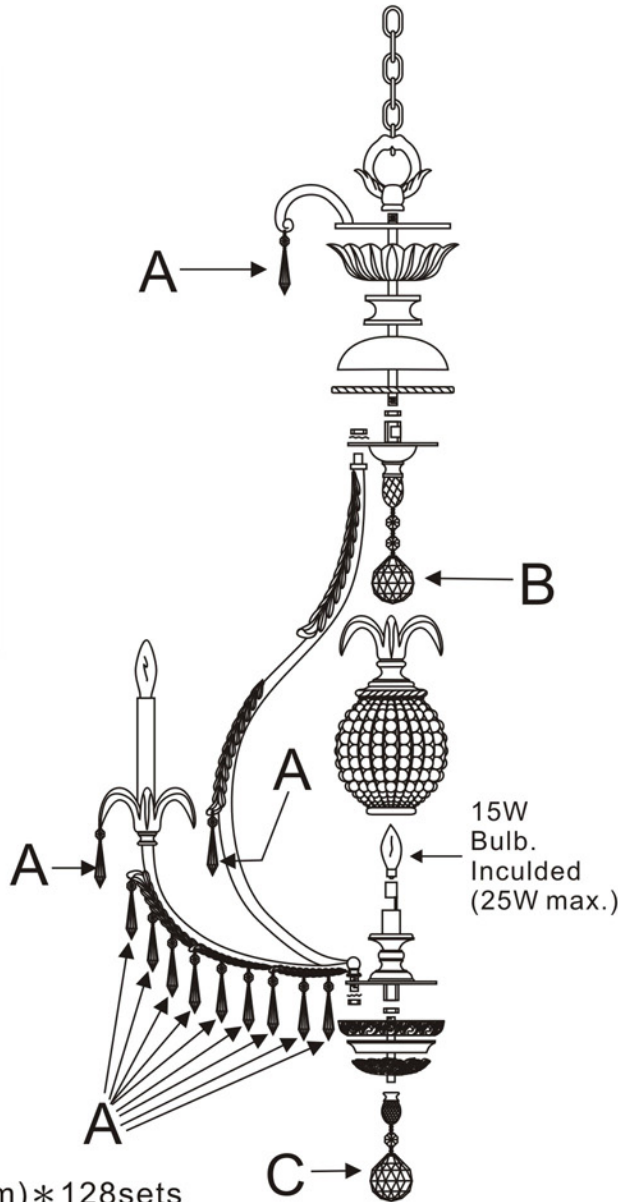
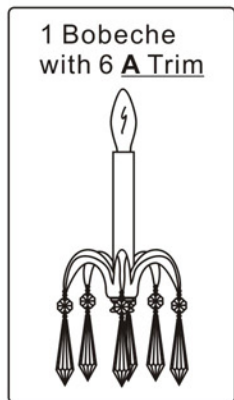


MODEL#:32457 ASSEMBLY AND DRESSING INSTRUCTIONS

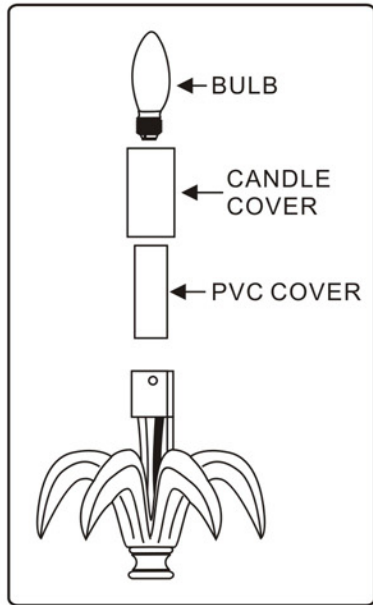

A = (14mm+38mm)*128sets



B = (14mm x 2 + 40mm)*1pc

C = (14mm + 40mm)*1pc

ITEM NUMBER:# 32457 INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

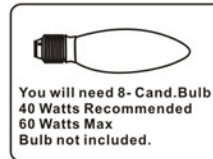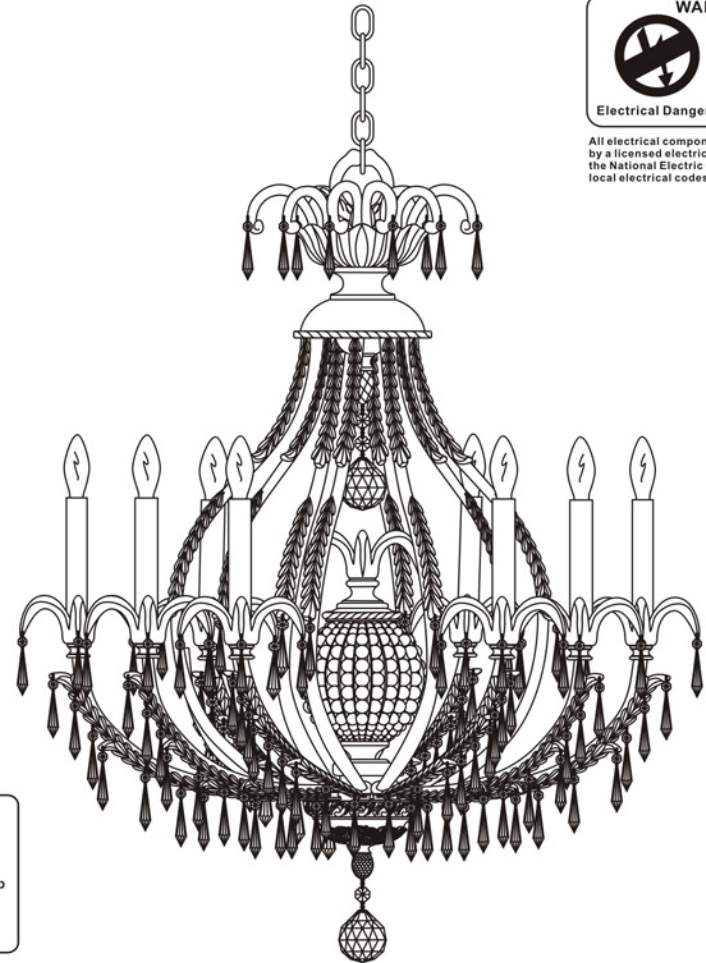

TI-32457 - 2008/4/9

