



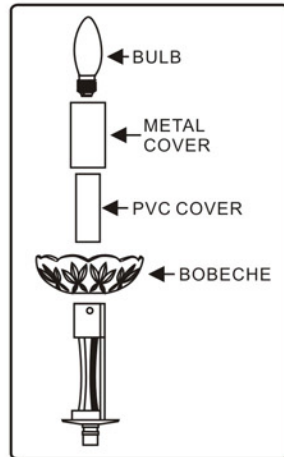


MODEL#:32460/3 ASSEMBLY AND DRESSING INSTRUCTIONS

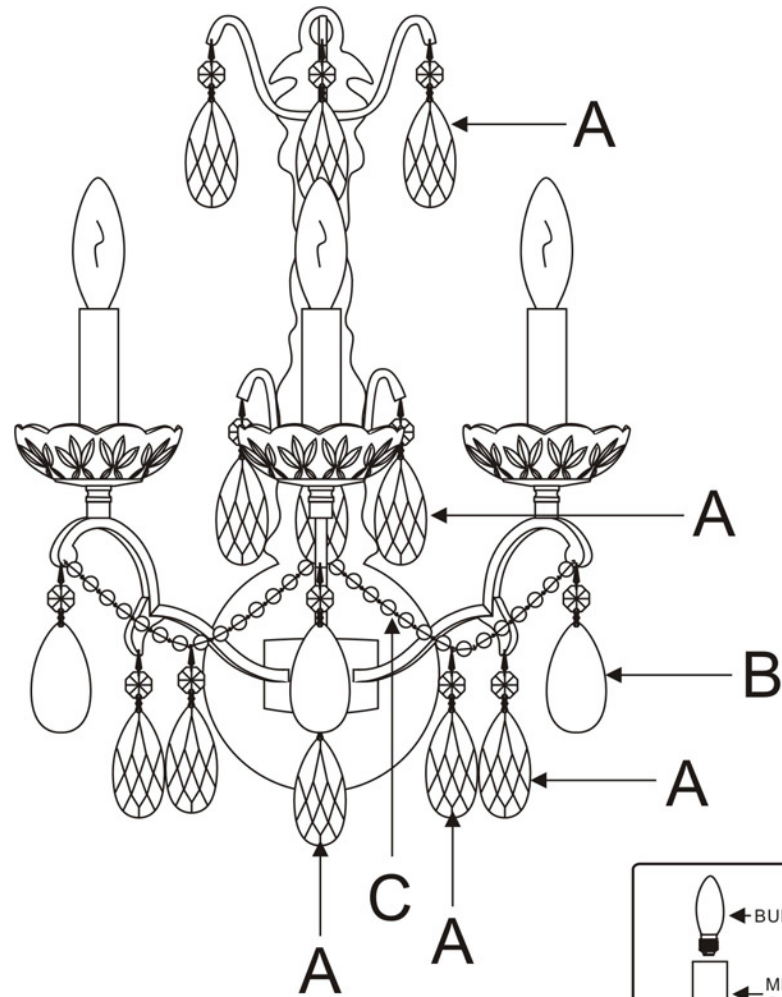



- A=  (14mm+63mm)*11sets
- B=  (14mm+ 63mm)*3sets
- C=  (8mm x 14 pcs)*2sets



ITEM NUMBER:# 32460/3 INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

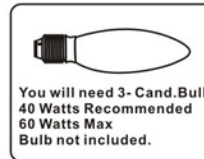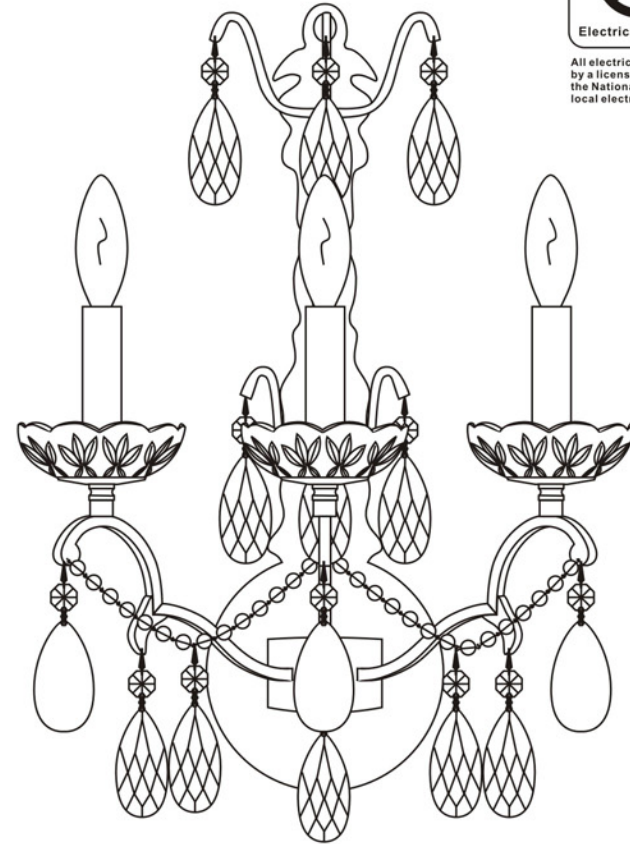

TI-32460/3 - 2008/1/7

