




ASSEMBLY INSTRUCTIONS FOR 32500/1

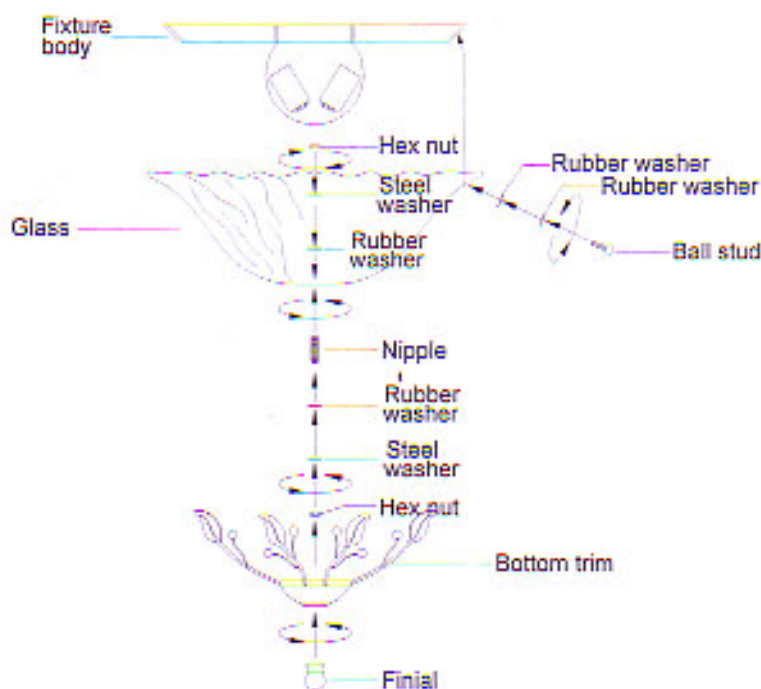

1. Before beginning assembly, carefully unpack and identify all parts referring to the illustration.
2. Turn off power to the installation point **OFF**. Locate the crossbar and secure it to the outlet box in the wall with (2) outlet box screws.
3. Make wires connections: Locate and attach the house ground wire to the fixture ground wire. Proceed to attach both to the crossbar with green ground screw. Using wire connectors connect the house white wire to fixture white (or ribbed side) wire; connect the house black (or red) wire to the fixture black (or smooth side) wire.
4. Carefully tuck all wires into the wall mounted outlet box and position the fixture over the outlet box. Align the holes in the back plate with the (2) mounting screws attached to the crossbar. Pass the fixture over the (2) mounting screws and secure by threading the (2) ball nuts onto end of screw. Hands tighten until snug.
5. Insert the nipple into the center hole of glass and secure firmly with steel washer, rubber washer and glass as shown in the diagram.
6. Install proper bulbs (not provided) to the socket referring to the markings and labels on fixture for maximum wattage.
7. Raise glass up against the bottom of fixture body, and secure with rubber washer and ball stud.
8. Place font over the nipple attached to glass and secure with finial.
9. Restore power to the installation point **ON**. Retain this sheet for future reference.